


WinLog 2.0

weilekes
elektronik

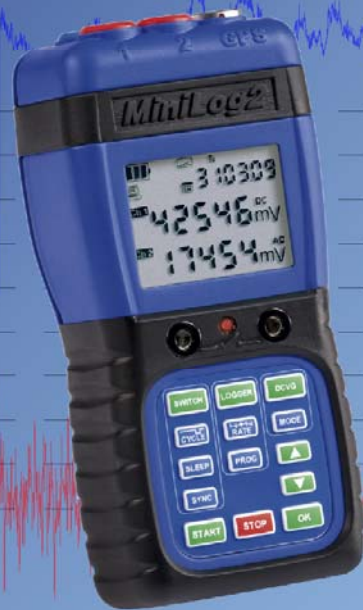

Installation Manual

System Requirements

Operating System: Windows XP SP3
 Windows Vista SP2
 Windows 7


You've to install the Microsoft ".NET Framework 3.5 SP1" before starting the installation.

If the Framework is not already installed on your PC, you can find the framework installation on the WinLog 2.0 CD in the folder ".NET3.5SP1" or on the Microsoft internet site itself.
(Google Search "dot net 3.5 sp1 installation")


Screen resolution: Minimal 800 x 600 Pixel
 Recommended 1024 x 768 Pixel

WinLog 2.0 Installation


1. Start the setup program on your WinLog 2.0 CD or out of the download file of the Weilekes Elektronik website: www.weilekes.de/download/files/wl20_en.zip.
2. Confirm the default settings for the installation folder with <Next>:

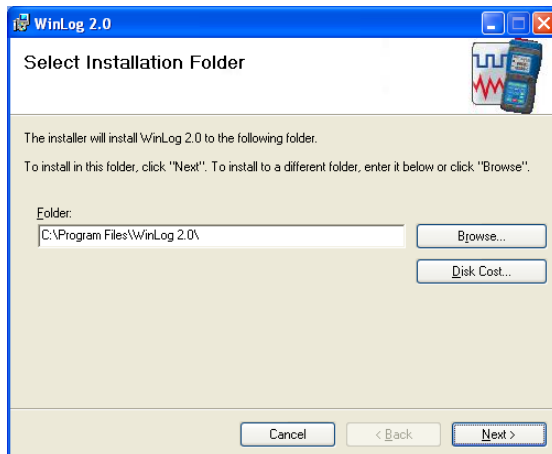


Confirm the start of the installation process with <Next>:

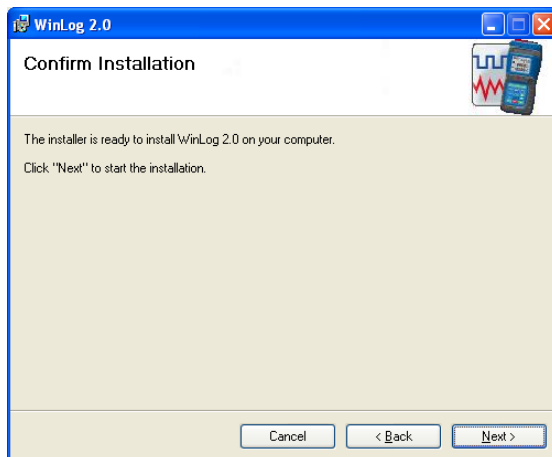

The setup software keeps you informed about the installation progress:

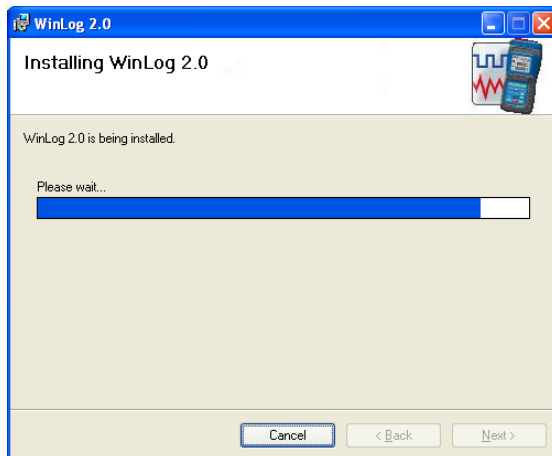

When finished, the setup software confirms the successful installation:

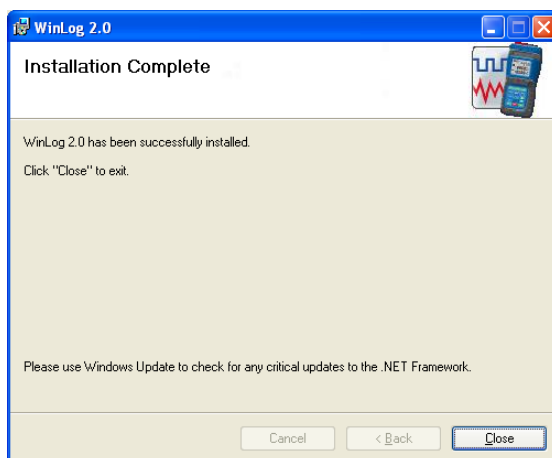


Confirm the end of the installation procedure with <Close>.


USB Driver Installation

For connecting the MiniLog2 with a PC, you've to install the USB driver on the PC.


1. Start the setup file "MiniLog2_Installer" out of the "USB MiniLog2" folder of your WinLog 2.0 installation CD or out of the following file of the Weilekes website:
www.weilekes.de/download/files/usb_ml2.zip.
2. Confirm the default settings for the installation folder with <Install>:

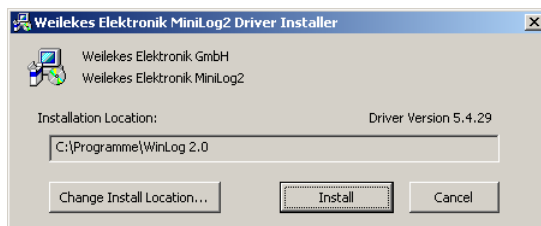

3. The driver installation software is now scanning your system for eventually already installed drivers. All needed files will be installed automatically in the Microsoft Windows system folder.

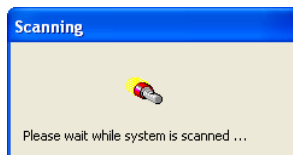


4. After the installation is completed, the driver installation software gives you a success confirmation:

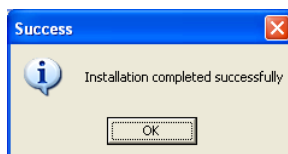

5. Now connect your MiniLog2 via the USB cable with your PC. Microsoft Windows signalizes a successful connection in the task bar:




6. The wizard for the installation of new hardware appears:

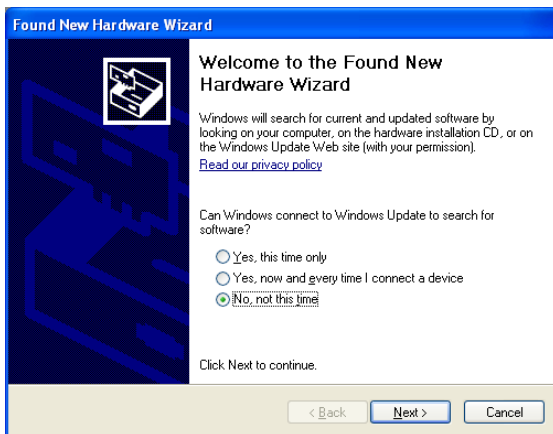

Choose "No, not this time" and confirm with <Next>, because the actual drivers have been already installed by the USB driver installation setup file.

7. In the following dialogue, confirm the recommended option with <Next>:

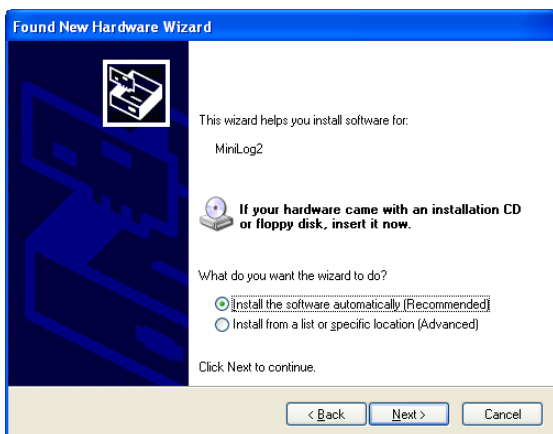

8. The USB driver will now be automatically installed and a completing message appears:



Note:

After connecting the MiniLog2 via USB cable with your PC, you can find the MiniLog2 with its COM port connection in the section "Ports" of the "Device Manager":

